

GA30002002 Fitting Instruction

300 SERIES WIDE CAB /07 – 07/11



REMOVE FRONT BUMPER BY REMOVING THE 6 8mm BOLTS IN THE FRONT AIR VENT HOLES

DISCARD BOLTS



REMOVE TOW HOOK FROM PASSENGER SIDE

DISCARD BOLTS AND TOW HOOK



REMOVE STEEL MOUNTING BRACKET FROM BULLBAR

ATTACH STEEL MOUNTING BRACKET USING SIX (6) 25mm x 8mm BOLTS AND WASHERS TO FRONT OF CHASSIS AS SHOWN

NOTE – LEAVE BOLTS LOOSE UNTIL FINAL ADJUSTMENT



ATTACH MOUNT TO PASSENGER SIDE FRONT HOLE USING ONE (1) 1½" X ½" BOLT AND NYLOC NUT WITH FLAT WASHERS

ATTACH MOUNT TO PASSENGER SIDE REAR HOLE USING ONE (1) 50mm x 14mm BOLT, 14mm SPRING WASHER AND FLAT WASHER TO CAPTIVE NUT IN CHANNEL RAIL

NOTE – LEAVE BOLTS LOOSE UNTIL FINAL ADJUSTMENT

GA30002002 Fitting Instruction

300 SERIES WIDE CAB /07 – 07/11




ATTACH MOUNT TO DRIVER SIDE USING ONE (1) 1½" x ½" BOLT AND NYLOC NUT WITH FLAT WASHERS

NOTE – LEAVE BOLTS LOOSE UNTIL FINAL ADJUSTMENT



DISCONNECT HARNESS PLUGS FROM INDICATOR LAMP AND PARKER LAMP AS SHOWN

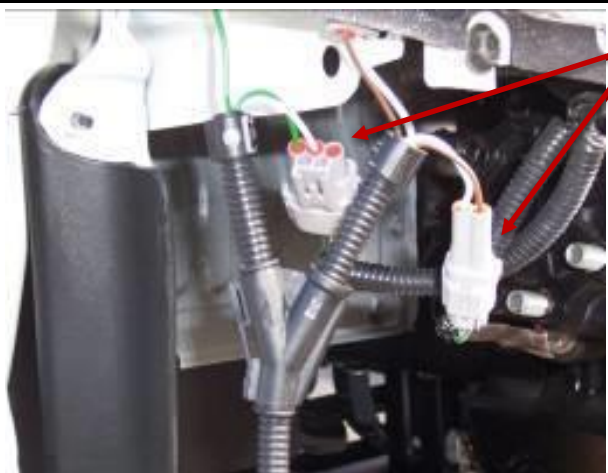

CONNECT WIRING HARNESS SUPPLIED TO BOTH LAMPS THEN CONNECT THE ORIGINAL HARNESS TO THE SUPPLIED HARNESS AS SHOWN



CABLE TIE HARNESS TO HOLE IN BODY SO PLUGS DO NOT HANG LOW AS SHOWN IN PHOTO

ALLOW ENOUGH CABLE FOR TILTING OF BULLBAR AND CAB

NOTE – DRIVER AND PASSENGER SIDE ARE THE SAME

GA30002002 Fitting Instruction

300 SERIES WIDE CAB /07 – 07/11



ATTACH BULLBAR TO MOUNT USING TWO (2) EYEBOLTS AND WASHERS PREVIOUSLY REMOVED

NOTE – LEAVE BOLTS LOOSE UNTIL FINAL ADJUSTMENT



LOCATE PIVOT POINTS AND FIT TWO (2) 2½" x 9/16" BOLTS, TWO (2) NYLOC NUTS AND FOUR (4) FLAT WASHERS

TIGHTEN NYLOC NUTS ENOUGH TO ENGAGE THE NYLOC AND STILL ALLOW THE BULLBAR TO PIVOT ON THE BOLTS



TIGHTEN FRONT EYEBOLTS AND ALIGN THE BULLBAR PARALLEL TO FRONT OF CABIN AND CHECK HEIGHT AT EITHER SIDE



TIGHTEN SIDE BOLTS OF MOUNTS

CHECK BULLBAR ALIGNMENT TO VEHICLE AGAIN

ONCE ALL ALIGNED AND BOTH SIDE BOLTS ARE TIGHTENED THEN PROCEED TO TIGHTEN FRONT 8mm BOLTS

GA30002002 Fitting Instruction

300 SERIES WIDE CAB /07 – 07/11




REMOVE EYEBOLTS AND LOWER BULLBAR
CONNECT WIRING HARNESS TO
INDICTOR/PARK LAMPS



LOCATE LIGHT WITH ORIGINAL 6mm SCREW
AFTER REMOVING PLASTIC CLIP AND
PLASTIC SLEEVE IN LIGHT HOUSING
REFIT WITH 16mm X 6mm BOLT AND
WASHER AND 6mm WHIZ NUT (SLIDE NUT
INTO HOUSING)




LOCATE ADJUSTING ARM WITH 16mm X
6mm BOLT, WASHER AND WHIX NUT

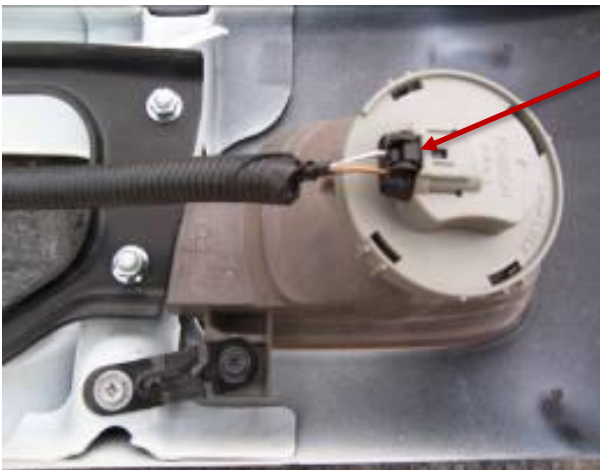

TO EXTEND THE LIGHT CABLE ON DRIVER
SIDE BARE INNER CABLE TO SEE WIRE
COLOURS AS PER DIAGRAM

GA30002002 Fitting Instruction

300 SERIES WIDE CAB /07 – 07/11

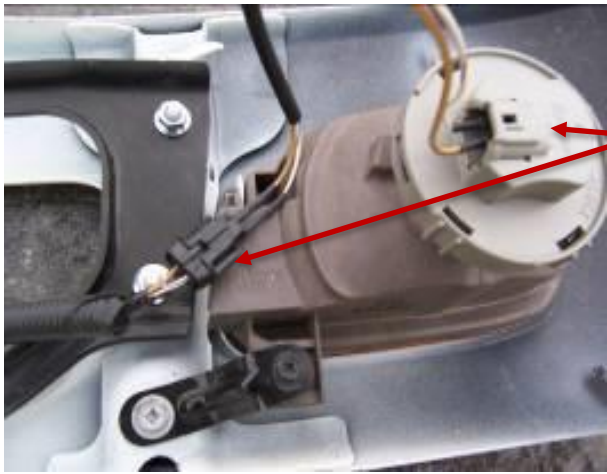

EXTENSION HARNESS HAS MATCHING COLOUR CODE WIRES

FEMALE END TO LIGHT, MALE END TO PLUG MAKING SURE THE SAME COLOUR WIRE IS FITTED TO THE SAME POSITION AS BEFORE THE PLUG WAS REMOVED

NOTE – IF WIRED OPPOSITE WAY TO ORIGINAL A FUSE WILL TERMINATE



WRAP NEW HARNESS WITH INSULATION TAPE AND CONTINUE UP TO PLUG



WRAP INSULATION TAPE AROUND LIGHT BASE



USE CABLE TIES TO SECURE HARNESS TO MOUNT

GA30002002 Fitting Instruction

300 SERIES WIDE CAB /07 – 07/11



PLACE WARNING LABEL ON PASSENGER SIDE NEAR CAB LIFTING HANDLE AS SHOWN



RAISE BULLBAR AND LOCK INTO POSITION
CHECK CABIN AND BULLBAR LAMP FUNCTION

GA30002002 Fitting Instruction
300 SERIES WIDE CAB /07 – 07/11



FITTING KIT

P/N GA30002002

P/N B3HN6302SY

Qty	Length	Diameter	Thread Pitch	Description	
6	25mm	8mm		Metric Bolt Grade 8H/T	
6		8mm		Flat Washer	
2	1 1/2"	1/2"	UNC	Bolt Grade 8H/T	
2		1/2"	UNC	Nyloc Nut	
4		1/2"		Flat Washer	
1	50mm	14mm	1.50mm	Metric Bolt Grade 8H/T	
1		14mm		Flat Washer	
1		14mm		Spring Washer	
FOG LIGHT FITTING KIT					
4	16mm	6mm		Metric Bolt	
4		6mm		Whiz Nut	
4		6mm		Flat Washer	
1				Extension Harness	P/N ICH300FL
2				Cable Ties	
PLACE IN SMALL BAG WITH MAIN BOLT KIT					
1	Fitting Instructions				
1	Tilt Cab Warning Sticker				
2	Indicator Wiring Harness				
					P/N ICHDUTRO300
SEALED IN CLEAR BAG AND TAPED TO STEEL MOUNT					

ATTACHED TO BULLBAR					
2		3/4"	UNC	Eyebolt Grade 8H/T	P/N ICEYEBOLT
2		3/4"		Flat Washer	
2	2 1/2"	9/16"	UNC	Bolt Grade 8H/T	
2		9/16"	UNC	Nyloc Nut	
4		9/16"		Flat Washer	
ADDITIONS					
2	LED Indicator/Parker Lights (95202)				
					P/N ICLED33INDPRK
1	Steel Bullbar Mount				

GA30002002 Fitting Instruction
300 SERIES WIDE CAB /07 – 07/11



**GA30002002 Fitting Instruction
300 SERIES WIDE CAB /07 – 07/11**



**DESPATCH CHECKLIST
B3HN6302SY
HINO 300 SERIES WIDE CAB /07 – 07/11**

Work Order No:	
Finish:	
Transport:	
Due Date:	

OC	_____	1	Steel Mounting Bracket
OC	_____	2	3" Overrides (CA01 Plastic)
OC	_____	2	Hino Badges
OC	_____	2	LED Parker Lights (ICLED33INDPRK-95202CUST)
WR	_____	2	Eyebolts (3/4" UNC ZP) and Washers – Fitted To Bar
WR	_____	2	2 1/2" x 9/16" UNC Bolt Grade 8H/T – Fitted To Bar
WR	_____	2	9/16" Nyloc Nut – Fitted To Bar
WR	_____	4	9/16" Flat Washer – Fitted To Bar
WR	_____	2	LED Parker Lights (ICLED33INDPRK-95202CUST) – Fitted To Bar
WR	_____	1	Bolt Kit – Taped to Mount

See other side of this page for photos of all mounts



**IS THIS PRODUCT "THE BEST IT CAN BE"?
IF NO FIX BEFORE CONTINUING**

_____/_____
Wrapper's Initials Checker's Initials

ALL PARTS CHECKED AND COMPLETED BY:

NUTS AND BOLTS: _____ DATE: ___/___/___
 ORDER CONTROL: _____ DATE: ___/___/___
 FINAL WRAP CHECK: _____ DATE: ___/___/___

GA30002002 Fitting Instruction
300 SERIES WIDE CAB /07 – 07/11



STEEL MOUNT
(TOP VIEW)



STEEL MOUNT
(SIDE VIEW)



Wrapper's Initials / Checker's Initials